


|   |        |   |             |    |              |
|---|--------|---|-------------|----|--------------|
| 8 | BLACK  | E | LIGHT GREEN | 43 | EARTH WIRE   |
| 7 | ORANGE | D | PURPLE      | 41 | ANGLE UL1815 |
| 5 | WHITE  | C | BROWN       | 40 | ANGLE UL1815 |
| 4 | GREEN  | B | SKY BLUE    | 39 | ANGLE UL1815 |
| 3 | YELLOW | A | PINK        | 38 | ANGLE UL1817 |
| 2 | BLUE   |   |             | 37 | ANGLE UL1817 |
| 1 | RED    |   |             | 36 | ANGLE UL1817 |

**SEGA** SEGA CORPORATION

OUT RUN 2 SP TOURS

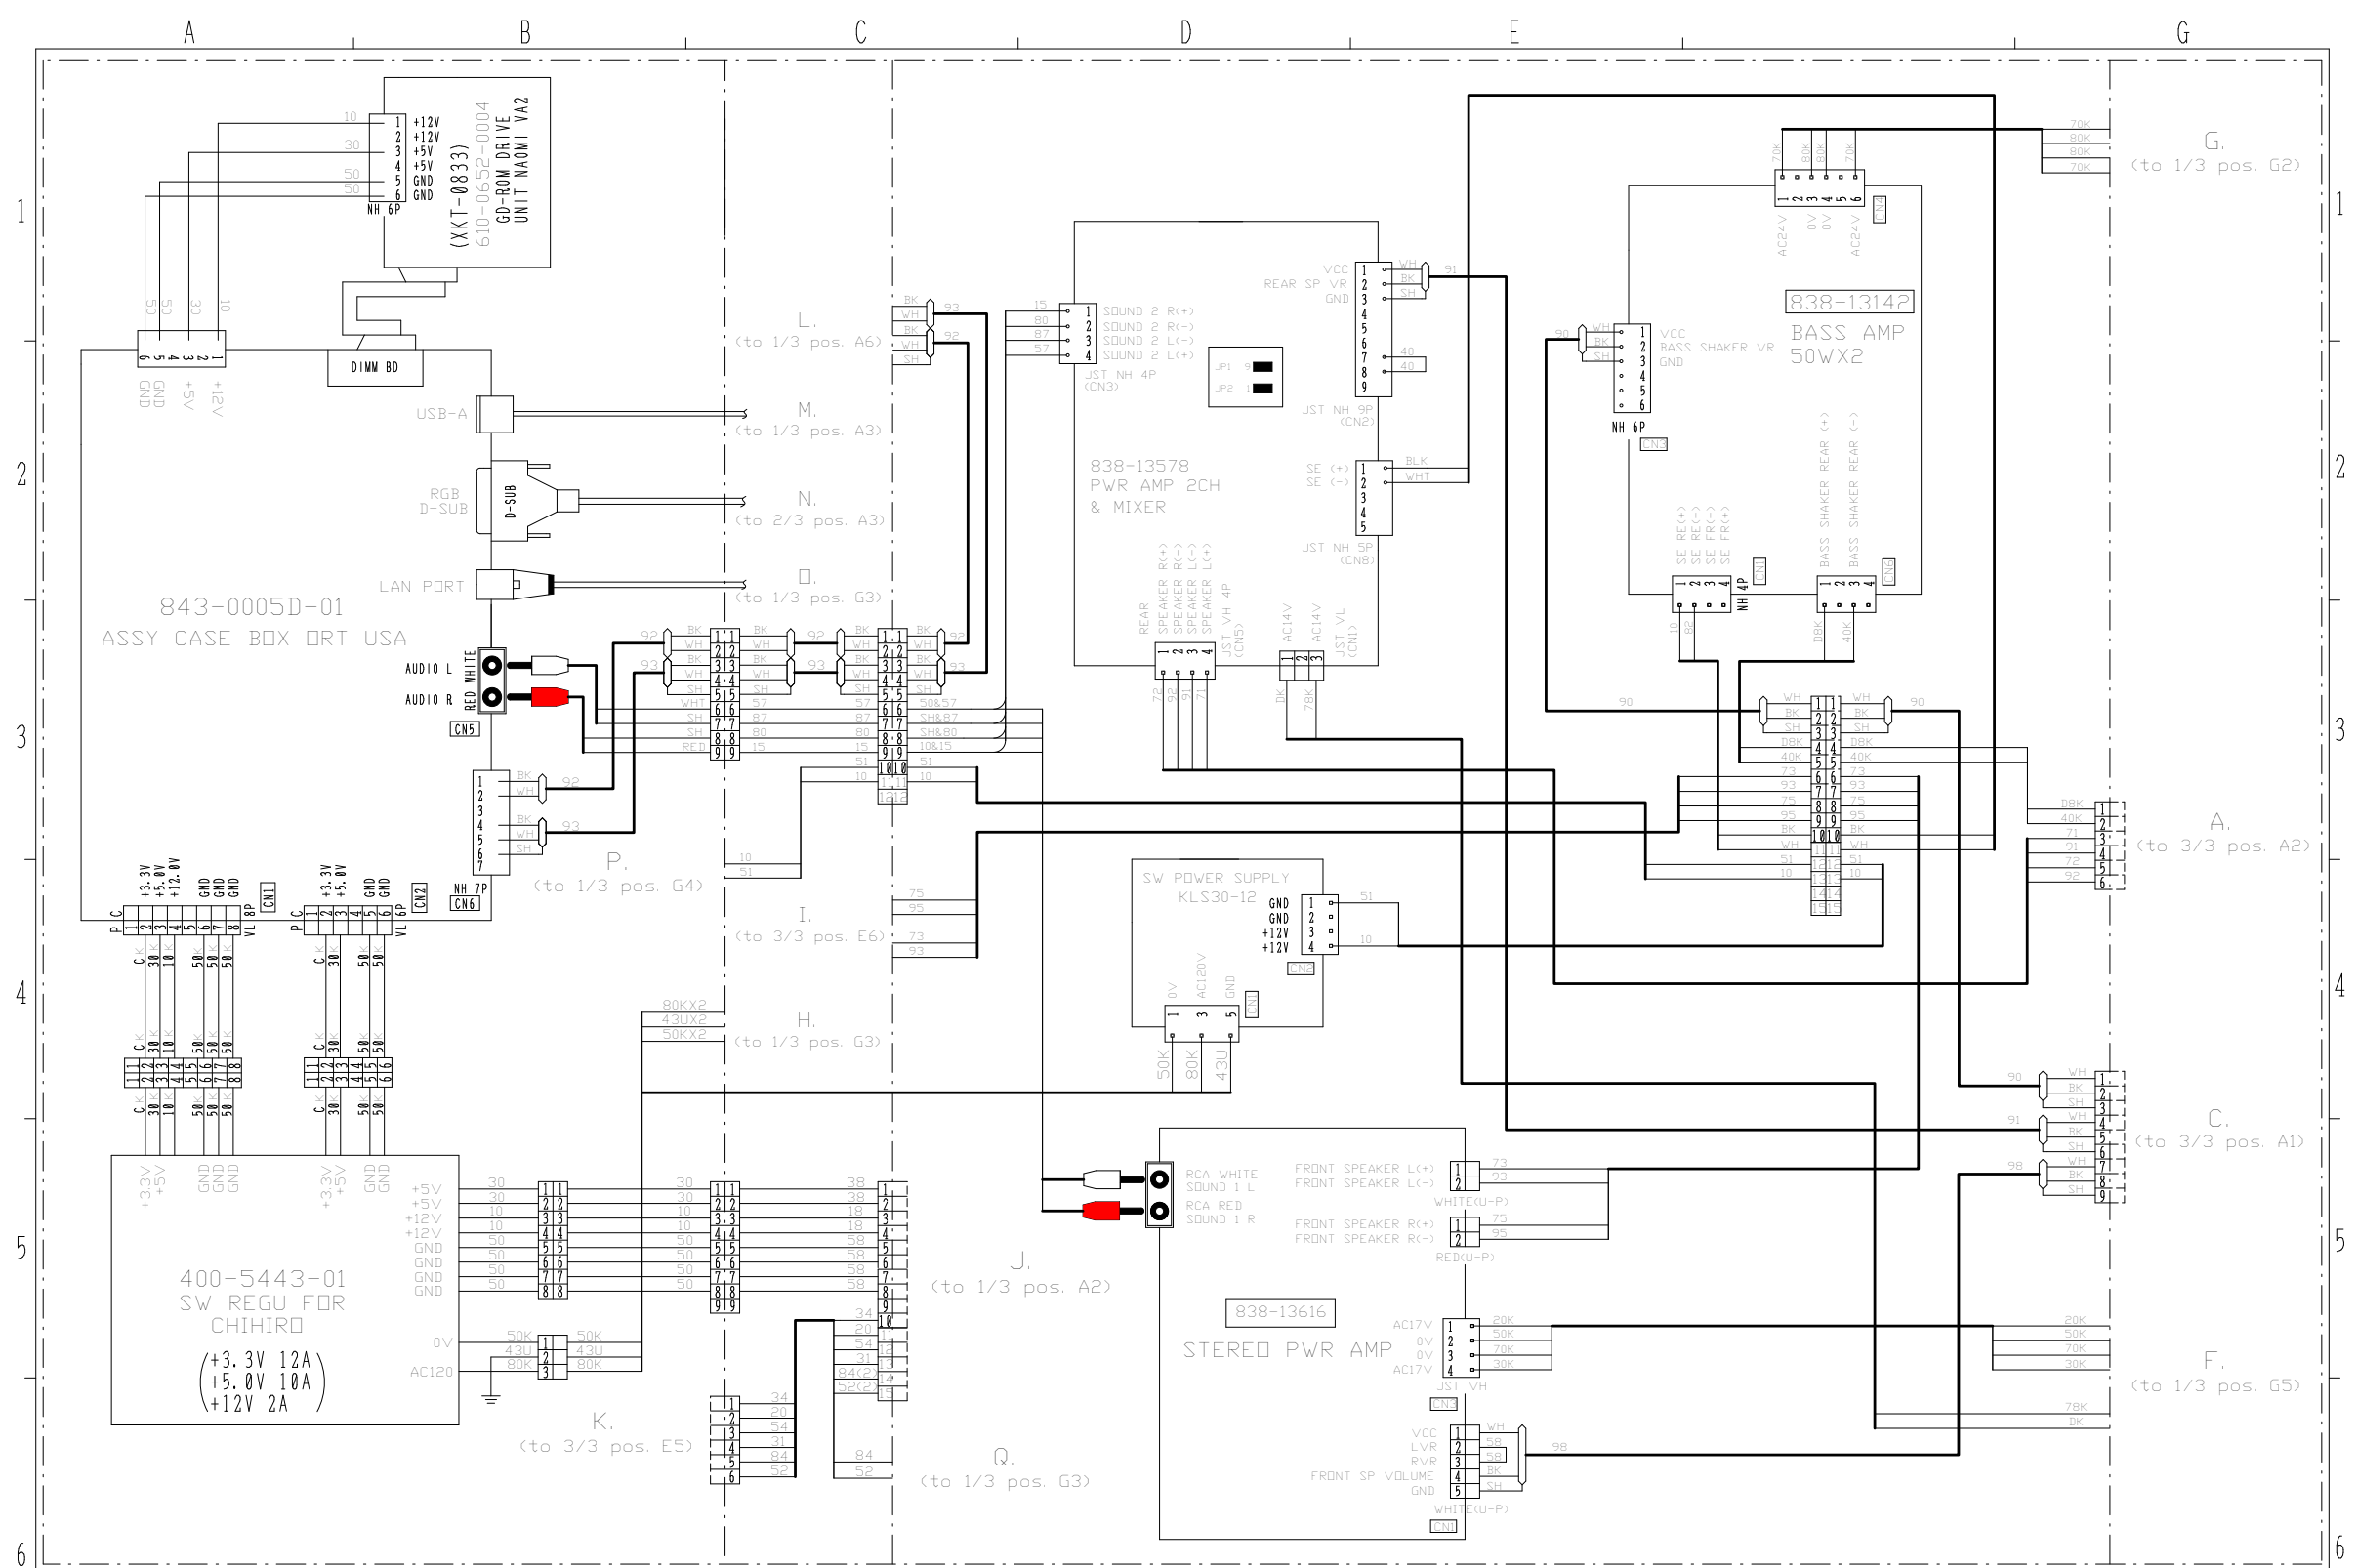

843-0005D-01  
ASSY CASE BOX DRT USA

400-5443-01  
SW REGU FOR  
CHIHIRO  
(+3.3V 12A)  
(+5.0V 10A)  
(+12V 2A)

838-13578  
PWR AMP 2CH  
& MIXER


838-13142  
BASS AMP  
50WX2

838-13616  
STEREO PWR AMP

|   |        |   |             |    |              |
|---|--------|---|-------------|----|--------------|
| 8 | BLACK  | E | LIGHT GREEN | 43 | EARTH WIRE   |
| 7 | ORANGE | D | PURPLE      | U  | ANG18 UL1815 |
| 5 | WHITE  | C | BROWN       | K  | ANG18 UL1815 |
| 4 | GREEN  | B | SKY BLUE    | L  | ANG28 UL1807 |
| 3 | YELLOW | A | PINK        |    |              |
| 2 | BLUE   |   | GRAY        |    |              |
| 1 | RED    |   |             |    |              |

**SEGA** SEGA CORPORATION

OUT RUN 2 SP TOURS

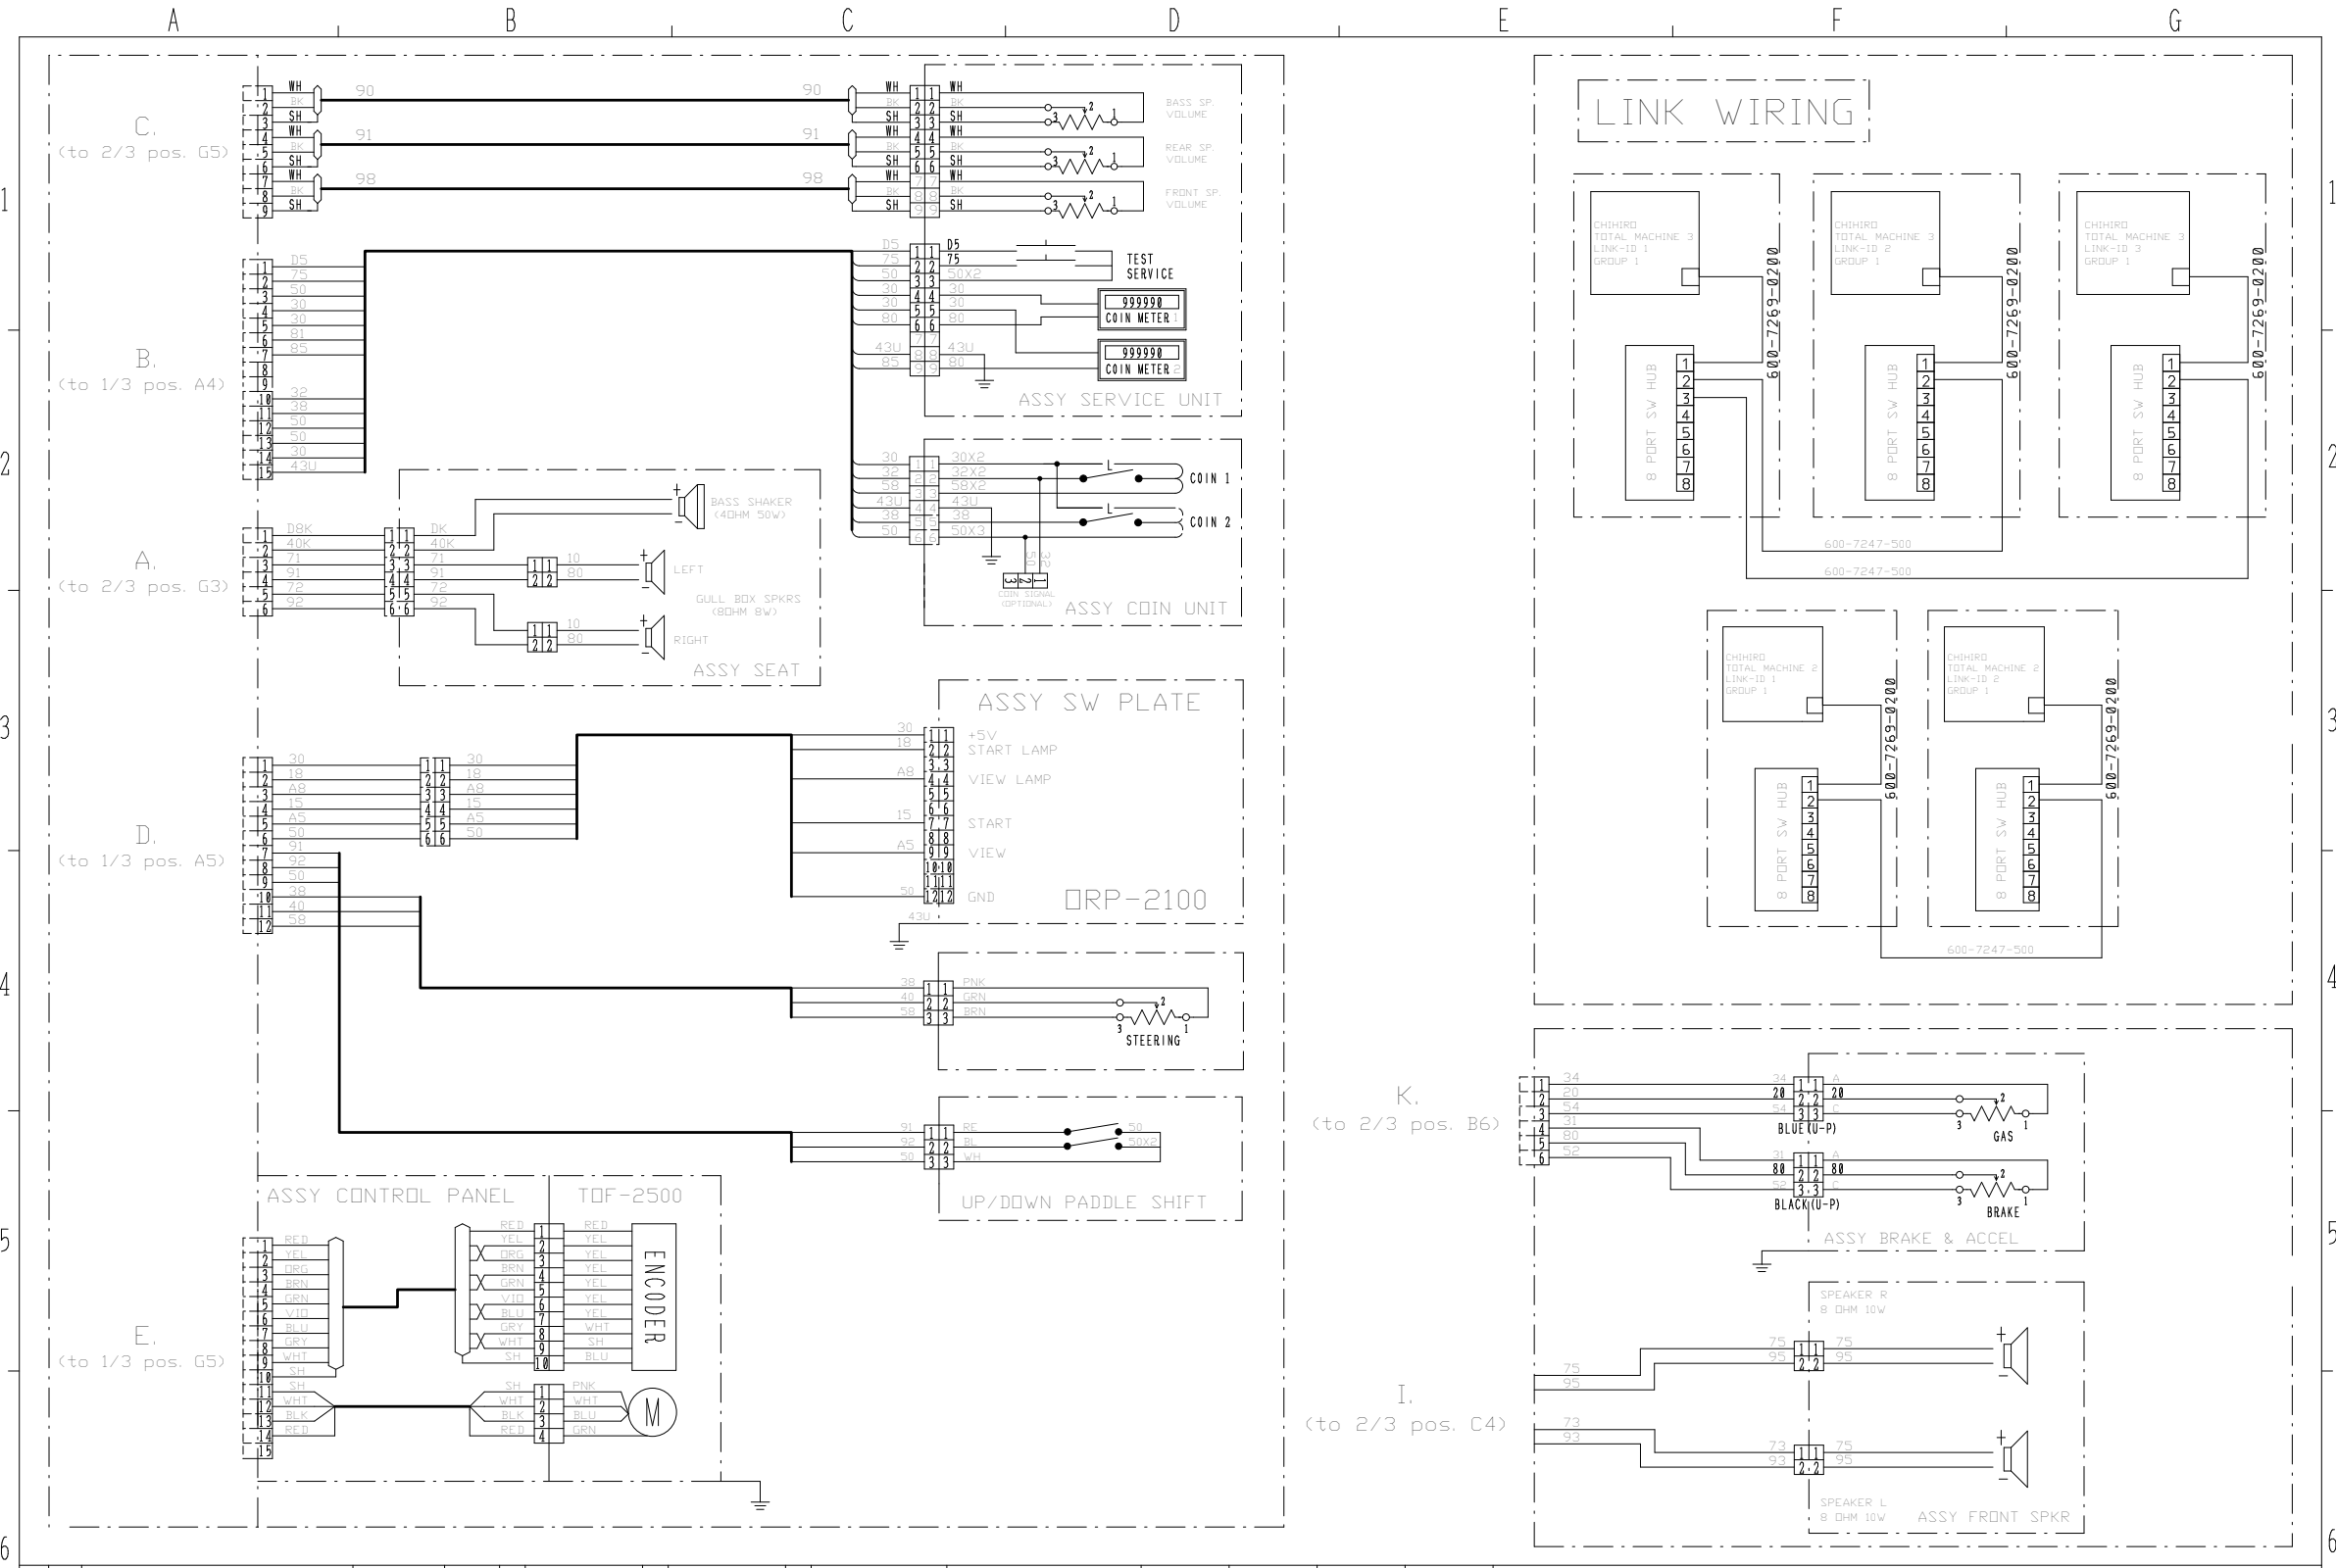

|   |        |   |             |    |              |
|---|--------|---|-------------|----|--------------|
| 8 | BLACK  | F | LIGHT GREEN | 4X | EARTH WIRE   |
| 7 | ORANGE | D | PURPLE      | U  | ANG16 UL1815 |
| 5 | WHITE  | C | BROWN       | K  | ANG18 UL1815 |
| 4 | GREEN  | S | SKY BLUE    | L  | ANG20 UL1815 |
| 3 | YELLOW | A | PINK        |    |              |
| 2 | BLUE   | S | GRAY        |    |              |
| 1 | RED    |   |             |    |              |

WIRE COLOR

